

POWERSHRED HS-1010 THE WORLD'S TOUGHEST SHREDDERS



Please read these instructions before use. Do not discard: keep for future reference.

Feljowes

Quality Office Products Since 1917



KEY

- A. Safety Flap
- B. Paper entry
- C. Disconnect switch (open door)
- D. Door
- E. Basket paper (inside)
- F. Casters
- G. See safety instructions
- H. Control Panel and LEDs

 - R 2. Reverse 3. Bin full
 - 4. Door open
 - 5. Safety Flap Open
 - 6. Low oil
 - 7. Auto oil complete

INDICATOR LIGHTS







when bin is full. Empty bag when bag full indicator lights up



Stops automatically if too much paper is inserted. Automatic reverse if paper iams



Stops automatically if safety flap is opened. Symbols flash alternately



Overload protection. Machine stops to cool down- approx. 10-15 minutes. Symbols flash alternately



Cutting shafts are automatically oiled



Oil bottle is empty

CAPABILITIES

Will shred: Paper only

Will not shred: Adhesive labels, continuous form paper, transparencies, newspaper, junk mail, credit cards, CD/DVDs, staples, paper clips, cardboard, laminates, file folders, X-rays or plastic other than noted above Paper shred size:

High Security Micro-Cut.... (Din 6) 1/32 in. x 3/16 in. (0.8mm x 5.0mm)

Maximum:

Sheets per pass

Paper entry width..... *8.5 in. x 11 in., 20lb., (75g) paper at 120V, 60 Hz, 15Amps; heavier paper, humidity or other than rated voltage may reduce capacity. Recommended maximum daily usage rates: 5,000 sheets per day, 10

* In order to perform at capacity, shredder must be plugged into a dedicated 20Amp, 120V outlet and auto oil system must be engaged.

ADVANCED PRODUCT FEATURES



Auto Oil™

Lubricates the cutters automatically to enhance performance and extend shredder life



Energy saving feature shuts down the shredder after 1 hour of inactivity

▲ WARNING: IMPORTANT SAFETY INSTRUCTIONS — Read Before Using!









- Keep away from children and pets. Keep hands away from paper entry. Always set to off or unplug when not in use.
- Keep foreign objects gloves, jewelry, clothing, hair, etc. — away from shredder openings. If object enters top opening, switch to Reverse (R) to back out object.



- Never use aerosol products, petroleum based lubricants or other flammable products on or near shredder. Do not use canned air on shredder
- Do not use if damaged or defective. Do not disassemble shredder. Do not place near or over heat source or water.
- This shredder has a Disconnect Power Switch (C) in the door. The door must be closed to operate shredder. In case of emergency, open door. This action will stop shredder immediately.
- Avoid touching exposed cutting blades under shredder head.
- Shredder must be plugged into a properly grounded wall outlet or socket of the voltage and amperage designated on the label. The grounded outlet or socket must be installed near the equipment and easily accessible. Energy converters, transformers, or extension cords should not be used with this product.
- . Do not operate the machine without the safety flap closed (A).

BASIC SET-UP

BASIC SHREDDING OPERATION

SHREDDER SET-UP





Ensure access to a dedicated 20Amp, 120V outlet

Make sure safety flap is securely in blace

PAPER



Plug in and make

sure door is closed



Press (c) ON to

activate

Feed paper straight into paper

entry and release

When finished

shredding set to (c) OFF

Do nothing and shredder will go automatically to

sleep mode after 1 hour

OILING SET-UP















Remove oil bottle holder from cabinet

Hook oil bottle holder into side of cabinet

Remove lid from oil bottle

Put oil tube into oil Place oil bottle bottle and screw stopper on

into oil holder on side if cabinet

 
Close door, Plug into socket-outlet

Oil pump starts automatically on first use. To stop Oil Indicator (\Diamond) from blinking red, press ON (©) after 15 seconds

After changing oil bottle, press Reverse (R) until Oil Indicator (a) no longer blinks red

SHEET CAPACITY GAUGE

Eliminates frustrating jams by preventing overloads.



Electronically measures paper thickness to prevent paper jams:

Up to RED: Too many sheets have been inserted. Automatic reverse of paper.

Up to YELLOW: Maximum sheet capacity.

Up to GREEN: Normal sheet capacity during shredding process.

SLEEP MODE

WHEN IN SLEEP MODE







To get out of sleep or In sleep mode press ON (🔿)

insert paper

TROUBLESHOOTING AND PREVENTIVE MAINTENANCE

- Empty wastebasket when bin full indicator lights up.
- Shredder won't run if the door is open, or bin needs to be emptied.
- Maintenance is an important part of protecting your investment. Don't forget to purchase our oil (3505801) and shredder bags (3604101).

Go to Support Section at www.fellowes.com or see back page of manual for useful telephone numbers.

PAPER JAM

Set to Off (4) and empty bin. Replace bin and follow the below procedures.



if too much paper is inserted.

Automatic reverse

if paper jams





reverse. Repeat if

necessary



Gently pull uncut Stops automatically paper from paper entry. Machine runs for a short time in

Shred One Sheet

CLEANING AUTO-START INFARED SENSORS

Paper detection sensors are designed for maintenance free operation. However. on rare occasions the sensors may become blocked by paper dust causing the motor to run even if there is no paper present (Note: two paper detection sensors are located in the center of the paper entry).

TO CLEAN THE SENSORS



Turn off and

unplug shredder





infared sensor





Use thin, long-handled Clean any brush to clean sensors. contamination from Make sure brush is the paper sensors clean and dry



POWERSHRED HS-1010 THE WORLD'S TOUGHEST SHREDDERS

WARRANTY

Limited Warranty: Fellowes, Inc. ("Fellowes") warrants the parts of the machine to outside of the country where the shredder is initially sold. ANY IMPLIED WARRANTY, be free of defects in material and workmanship and provides service and support for INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS 1 year from the date of purchase by the original consumer. Fellowes warrants the HEREBY LIMITED IN DURATION TO THE APPROPRIATE WARRANTY PERIOD SET FORTH cutting blades of the machine to be free from defects in material and workmanship ABOVE. In no event shall Fellowes be liable for any consequential or incidental damages torming blades of the machine to be their from defects in finderlan and workindship. Above: In the event shall reproduct. This warranty gives you specific legal rights. The duration, be defective during the warranty period, your sole and exclusive remedy will be repair terms, and conditions of this warranty are valid worldwide, except where different or replacement, at Fellowes' option and expense, of the defective part. This warranty limitations, restrictions, or conditions may be required by local law. For more details or does not apply in cases of abuse, mishandling, or unauthorized repair. The user is to obtain service under this warranty, please contact us or your dealer. responsible for any additional costs incurred by Fellowes in servicing the paper shredder

Questions or Concerns?

www.fellowes.com Troubleshooting Registration Manuals	Customer Service & Support Troubleshooting Replacement parts General questions
Australia	+1-800-33-11-77
Canada	+1-800-665-4339
Europe	00-800-1810-1810
Mexico	+1-800-234-1185
United States	+1-800-955-0959

